 
 
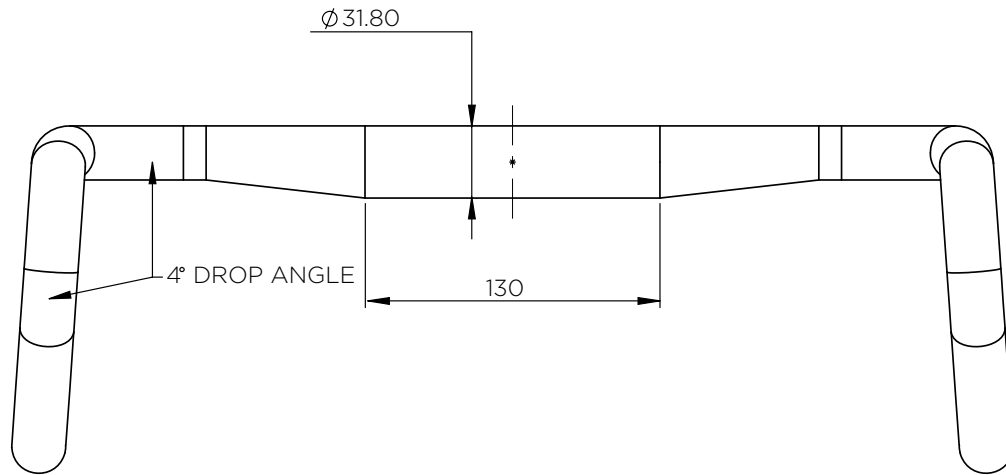 



STANDARD HANDLEBAR MEASUREMENT GUIDE

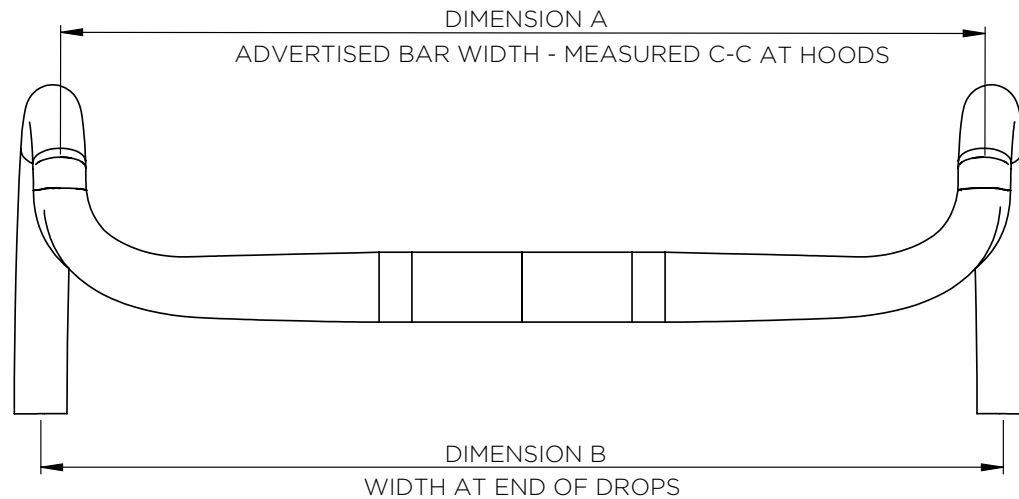

MODEL:	DIMENSION A:	DIMENSION B:
EC70 SL RB 40CM	40	42
EC70 SL RB 42CM	42	44
EC70 SL RB 44CM	44	46
EC70 SL RB 46CM	46	48
EC90 SLX RB 38CM	38	40
EC90 SLX RB 40CM	40	42
EC90 SLX RB 42CM	42	44
EC90 SLX RB 44CM	44	46
EC90 SLX RB 46CM	46	48
E100 RB 40CM	40	42
E100 RB 42CM	42	44
E100 RB 44CM	44	46

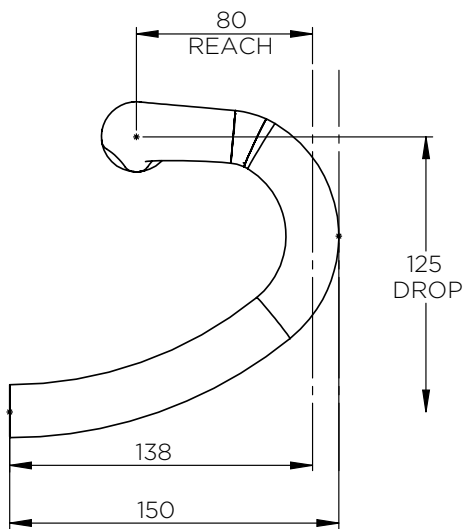

 AERO HANDLEBAR MEASUREMENT GUIDE

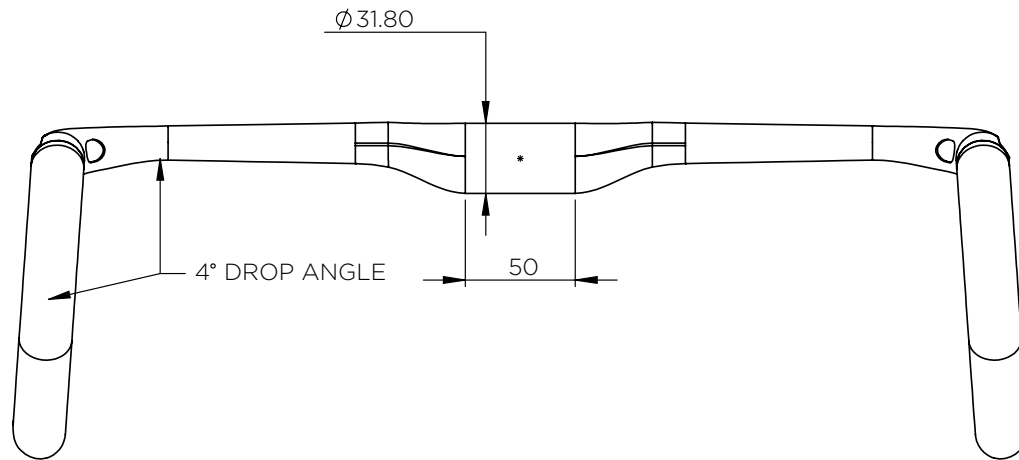

MODEL:	DIMENSION A:	DIMENSION B:
EC70 AERO RB 40CM	40	42
EC70 AERO RB 42CM	42	44
EC70 AERO RB 44CM	44	46
EC90 AERO RB 40CM	40	42
EC90 AERO RB 42CM	42	44
EC90 AERO RB 44CM	44	46

