



RACEFACE

BOTTOM BRACKET INSTALLATION

BB92/89.5/104.5/107

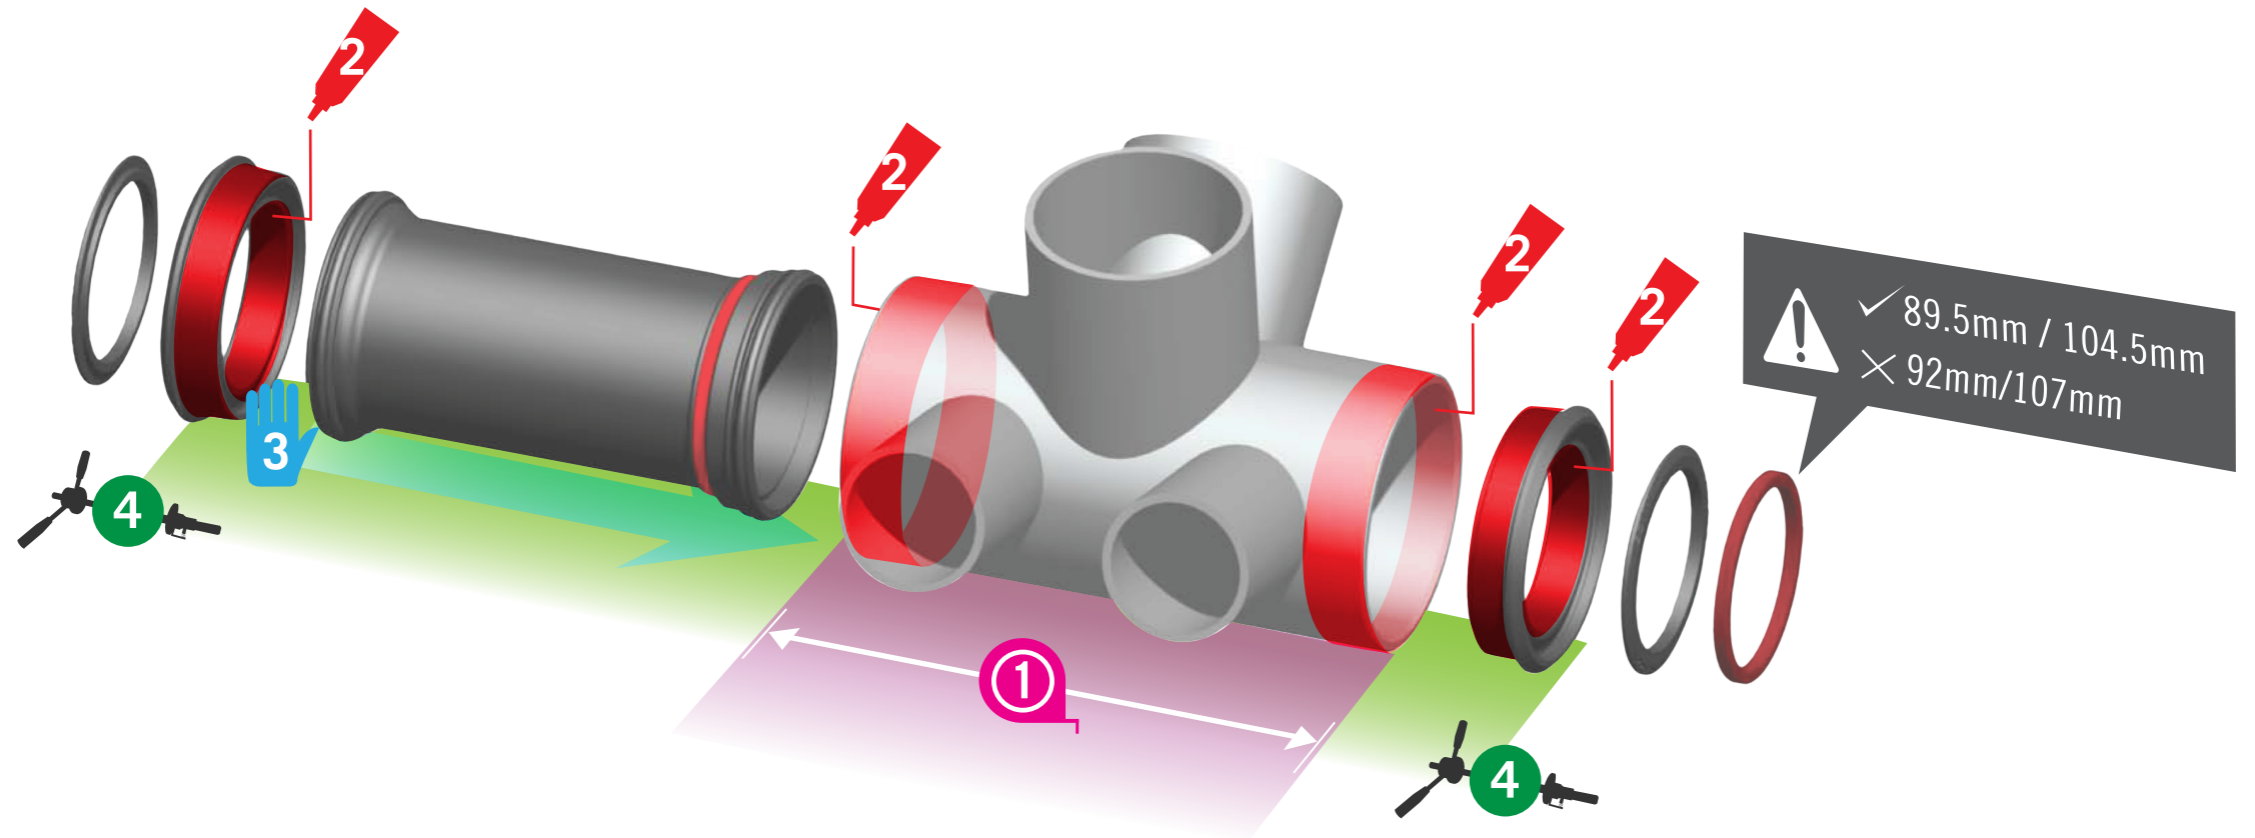

1 MEASURE
Messen
Medir
Mesurer

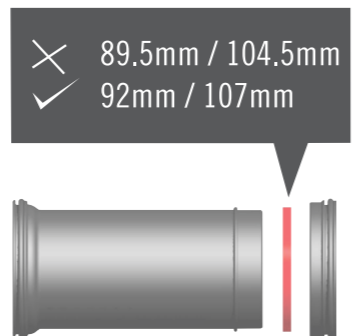

2 GREASE
Fett
Engrasar
Graisser

3 HAND PRESS
Von Hand Einpressen
Apretar Con La Mano
Enfoncer à la main



Park Tool™ HHP-2